



# NORDIC

## MEDIUM AND HIGH BACK EXECUTIVE CHAIRS

### COMPOSITION AND MATERIALS

#### VERSIONS

Available in:

- Single color,
- bicolor, color 1 seat and backrest shell
- color 2 seat and backrest cushions

(



Single Color



Bicolor

#### STRUCTURE, PADDING

- High density injected foam backrest padding with inner metal frame, foam density 70 kg/m<sup>3</sup>
- High density injected foam seat padding, density 70kg/m<sup>3</sup>
- Lumbar support and seat panel in beech plywood, with injected foam padding

 
#### ARMRESTS

Incorporated armrests




#### MECHANISM AND SEAT REGULATION

AS – Self balancing synchronized mechanism, with 4 limitation locks



 **Seat height**  
Pull the lever A upwards without sitting to increase the height of the seat. Press the lever A upwards to reduce the height of the seat while sitting




**Tilting of the chair**  
A spring system allows the chair to tilt, following the natural body movement.



**Backrest tension control**  
Regulate the tension of the backrest using the handwheel placed underneath the mechanism.

MECHANISM AND SEAT REGULATION

 AQ – Self balancing incorporated synchronized mechanism, with 3 tilt limitation locks



Seat height  
Press the button A without sitting to increase the height of the seat. Press the button A to reduce the height of the seat while sitting



Tilting of the chair  
Pull the lever B outwards to unlock. Press the lever B inward to lock the backrest into desired position.

BASE

B76 – 5 star polished aluminium base Ø 720mm



CASTORS



R26 - Oversize self breaking castors in PP Ø 65 mm



R27 - Hard floor oversize self breaking black castors in PP, Ø 65 mm



R28 - Hollowed hard floor oversize self-breaking black castors in PP Ø 65 mm

 


R21 - Oversize hard floor castors, chromed in PP Ø 60 mm

DIMENSIONS, VOLUMES AND WEIGHT

cod. NOR\_P 111 AS B76


cod. NOR\_P 122 AS B76

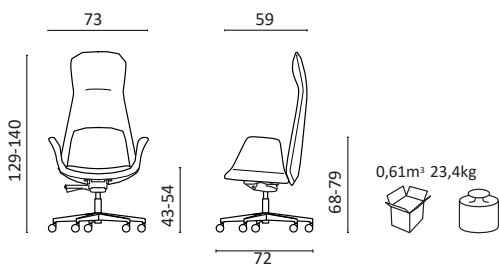

• Medium back padded chair


cod. NOR\_D 111 AS B76

 cod. NOR\_D 122 AS B76

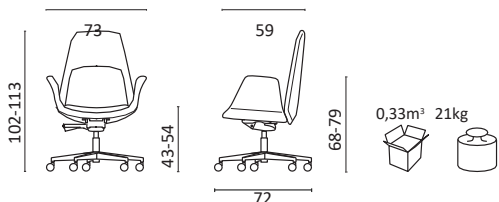


cod. NOR\_P 111 AQ B76

 cod. NOR\_P 122 AQ B76

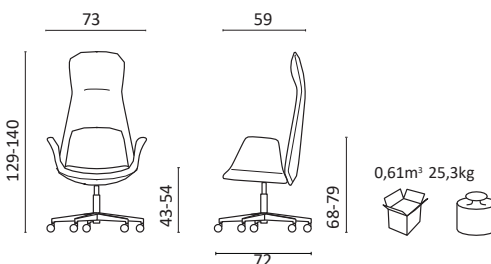


cod. NOR\_D 111 AQ B76

 cod. NOR\_D 122 AQ B76

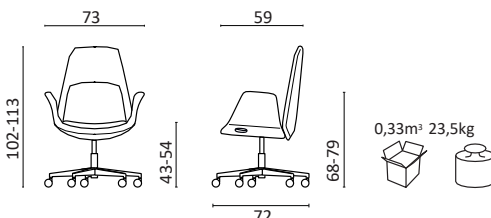

Product codes refer to Milani 2018 pricelist.

## DATASHEET

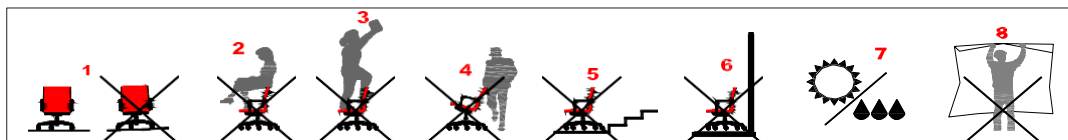 

### GENERAL INFORMATION

During video terminal use, ensure your feet are firmly on the floor; the angles between calf and thigh, thigh and upper body, forearm and shoulder, shall form a 90° angle. The knee shall be close to the front edge of the seat.

- 1) The seat shall be only used on flat and clean surfaces, avoiding uneven floors (ducts, joints etc..)
- 2) The seat can only be used by one person at a time.
- 3) Never stand with the feet on the chair; never sit on the armrests or on the outer edge of the seat.
- 4) Do not remove knobs or screws and, in the case of broken, missing or worn parts, do not use the chair until they are duly replaced with suitable spare parts supplied by Milani Srl.
- 5) Avoid use near dangerous objects or places (cables, steps, stairs, doors, windows, etc.).
- 6) Avoid use near walls or objects that may be damaged.
- 7) Do not expose the chair to direct sunlight or in excessively humid environment, do not use outdoors: the upholstery may be irreparably damaged.
- 8) Do not use the packaging improperly: it may cause chocking.  
The product is intended for its normal use , in offices and similar environments.

Useful information on castors choice:

Nylon self-breaking castors: suitable for normal floors and carpets; equipped with a self-breaking device that ensures higher safety.

Self-breaking rubber castors: Suitable for delicate floors (eg parquet). Equipped with a soft tread to ensure greater resistance on the floor and a self-breaking device for higher safety.

Product maintenance:

Check periodically (at least every month) that all the screws are firmly fixed.

Periodically lubricate (at least every 6 months) the mechanical parts subject to movement, in particular gas lifts, which can be only replaced by qualified personnel in case of breaking or malfunction .

Periodically clean the castors according to the environmental conditions(at least every 3 months).

Any upholstered part covered with fabric shall be cleaned with a brush or vacuum cleaner, any upholstered part in natural or artificial leather shall be cleaned with a clean, damp and soft cloth; for difficult stains use specific delicate detergents following the specific product instructions ; all other parts (plastic, metal, wood) must be cleaned with a damp cloth. Do not use alcohol-based products, bleach, solvents or abrasive products (it is advisable to try first on a non-visible part).

For any problem ask for the assistance of qualified personnel.

### WARRANTY

The warranty includes free replacement of all moving mechanical parts subject to wear: castors, gas lift, mechanisms in general, provided that the defects are not caused by misuse or improper use of the product . Transport and delivery costs will be charged to the customer starting from the second year from sale. The warranty is applicable only providing all information related to the product (specifying model, code and purchase document) Repairs can be made:

- 1) In case the defect is defined, parts will be shipped and replaced .
- 2) In case the defect has to be defined, shipping out the seat to Milani S.r.l. with suitable packing by designated courier. If after checking the product, Milani S.r.l. will reckon that the defect was caused by the customer, will charge all related costs including transport.

### DISPOSAL INFO

Here you can find a list of materials used in our production process, in order to adopt a correct approach to recycling and disposal :

Wood: beech or birch plywood, chipboard, hardboard

Metal: iron, steel, die-cast aluminum

Plastics: PVC, polypropylene, polyurethane, nylon

Fabrics: natural leather, artificial leather, fabric, mesh

Our products do not contain harmful or potentially dangerous substances.

**CERTIFICATIONS**

Milani S.r.l. obtained the following certifications :

UNI EN ISO 9001 Quality management system according to UNI norms

EN ISO 14001 Environmental management system

OH SAS 18001 Work safety management system